



AUTO SPREAD
CONTROL

BOSS
SNOWPLOW

SPREAD SALT WITHOUT THE GUESSWORK

Auto Spread adjusts automatically based on how fast you're driving and how wide you're spreading, with a direct connection to the truck for the fastest reaction to speed changes:

- ⊗ **Truck Starts Moving:** Material flow begins and spinner starts automatically
- ⊗ **Truck Speeds Up and/or spread width is increased:** Material flow increases
- ⊗ **Truck Speeds Down and/or spread width is decreased:** Material flow decreases
- ⊗ **Truck Stops Moving:** Material flow stops and the spinner stops



Waste Reduction

Helps reduce material waste and over-application.



Improved Control

Set and control application rates using the measurement that fits your operation (1,000 Square feet, per acre, or per lane mile).

Standard Control Manually control feeder and spinner speeds (0–10)



Rate Control Set the amount of material spread per minute



Auto Spread Set application rate per area; the truck automatically adjusts

Available as an optional add-on for
VBX+ and **MBX+** spreaders



Scan To
Learn More



VBX+ combines heavy-duty, reliable construction and smart features designed for the modern contractor.

- ❄️ Trusted durability, sleek LED lighting, and advanced safety features.
- ❄️ 1.5, 2, and 3 cubic yard auger or pintle system.
- ❄️ Standard rate control and material tracking up to 10 jobs.



Scan To
Learn More



MBX+ delivers rugged stainless-steel construction and trusted BOSS durability for municipal and commercial-grade operations.

- ❄️ Dual flip spinner assembly with 4 cubic yard hopper and 1–2 cubic yard extensions.
- ❄️ High-output pintle chain spreads up to 425 lb/min.
- ❄️ Standard rate control and material tracking up to 10 jobs.

