

Straight-Blade Controls

Joystick Controller

The joystick controller operates the movement of the snowplow.

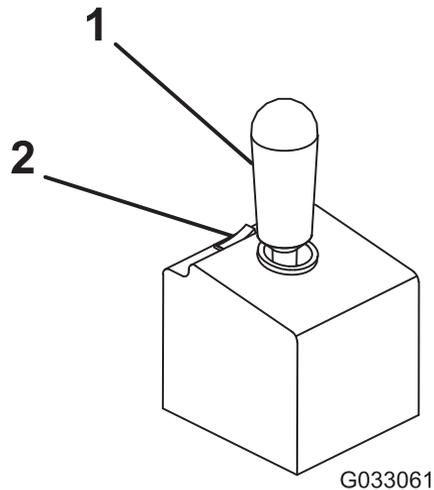


Figure 16

1. Joystick 2. On/Off switch

- On/Off switch—turns the plow controller on and off. A red light will illuminate when the controller is on.

Note: Turn off the controller when not in use to prevent accidental activation of the plow.

- Directional joystick—controls the direction that the plow moves
 - To raise the plow blade, pull the joystick back.
 - To lower the plow blade, push the joystick forward.
 - To angle the plow blade right, push the joystick right.
 - To angle the plow blade left, push the joystick left.
 - To activate the Float feature, push the joystick forward until it clicks into the detent position, allowing the plow blade to follow the contour of the ground. The joystick stays in the Float position until it is centered again.

SmartTouch2 Controller

The SmartTouch2 controller operates the movement of the snowplow.